

<b>(Ref. No.) Description</b>	<b>Function</b>
(10) Neutral indicator (green)	Lights when the transmission is in neutral.
(11) Right turn signal indicator (green)	Flashes when the right turn signal operates.
(12) Fuel gauge	Shows approximate fuel supply available (page 14).
(13) Coolant temperature gauge	Shows coolant temperature (page 13).
(14) Low oil pressure indicator (red)	<p>Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p><b>CAUTION:</b></p> <p><b>* Running the engine with insufficient oil pressure may cause serious engine damage.</b></p>
(15) Tripmeter	Shows mileage per trip.
(16) Tripmeter reset knob	Resets tripmeter to zero (0). Turn the knob to direction shown.