

Current fuel mileage

Displays the current or instant fuel mileage.

Display range: 0.1 to 99.9 km/L (L/100km, mile/L or mile/gal)

- When your speed is less than 7 km/h (5 mph): "--.-" is displayed
- Less than 0.1 km/L (L/100km, mile/L or mile/gal) or 99.9 km/L (L/100km, mile/L or mile/gal) or more : "--.-" is displayed

When "--.-" is displayed except for the above-mentioned case, go to your dealer for service.

Display range: 0.1 to 99.9 km/L (L/100km, mile/L or mile/gal)

- Initial display: "--.-" is displayed
- Less than 0.1 km/L (L/100km, mile/L or mile/gal) or 99.9 km/L (L/100km, mile/L or mile/gal) or more : "--.-" is displayed
- When the tripmeter A or B is reset: "--.-" is displayed

When "--.-" is displayed except for the above-mentioned case, go to your dealer for service.

To reset the average fuel mileage:



Average fuel mileage

Displays the average fuel mileage since the selected tripmeter was reset.

The average fuel mileage will be calculated based on value displayed on the tripmeter (A or B) selected. Also, the average fuel mileage for tripmeter A will be displayed when the odometer or the mileage countdown is selected.