


2 Backlight brightness adjustment:

You can adjust the brightness to one of five levels.

- 1 Press **A** button. The brightness is switched.

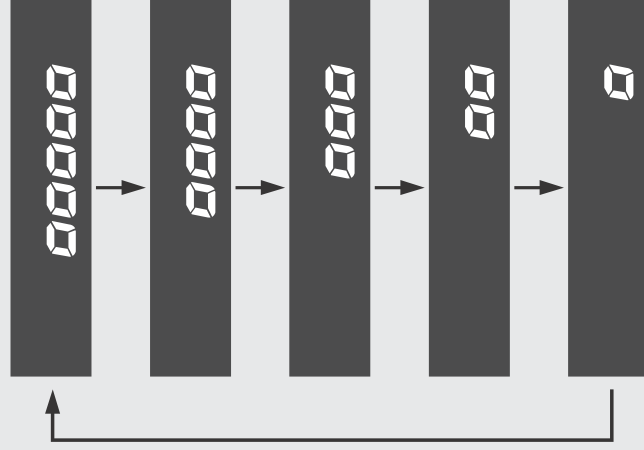


- 2 Press **B** button. The backlight is set, and then the display moves to the on/off of blinks of HISS indicator (HISS indicator comes on).

3 HISS indicator setting:

You can select the blink or off the HISS indicator.

- 1 Press **A** button to select "On" (blinks) or "OFF" (off).

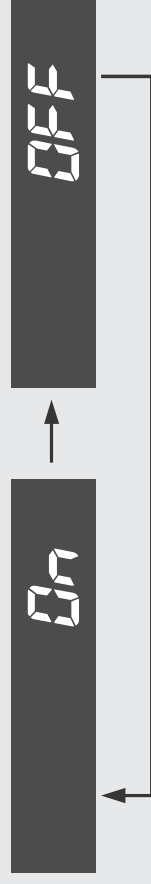

- 2 Press **B** button. The HISS indicator setting is set, and then the display moves to the changing of the speed and mileage unit.