


Front Seat

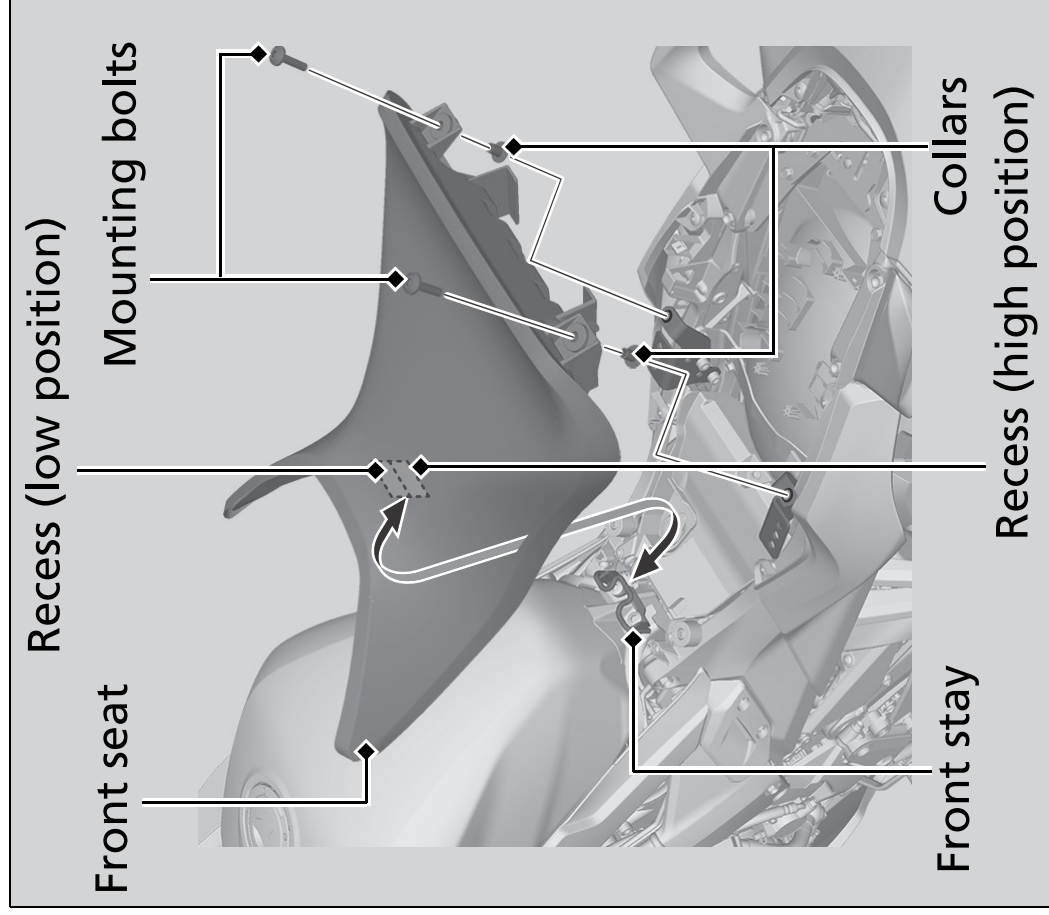

Removal

1. Remove the rear seat. ➔ P. 64
2. Remove the mounting bolts and collars, and then pull the front seat back and up.

Installation

1. Install the front seat by aligning the recess for the current seat height position (low or high) with the front stay.
2. Install the collars and mounting bolts.
3. Tighten the mounting bolts securely.
4. Make sure that the mount positions of the recess and the adjust plates are the same seat position. ➔ P. 92
5. Install the rear seat.
Make sure that the seat is locked securely in position to pull it up lightly.

For the front seat height adjustment, see “Changing the Front Seat Height.” ➔ P. 91