 


Instruments *(Continued)*

To activate/deactivate the automatic reset mode

You can activate or deactivate the automatic reset by refuelling mode. Initial setting is deactivated.

- 1 Press and hold **B** button, and turn the ignition switch ON. Keep **B** button pressed until the odo/tripmeter segments and units of the multi-function display starts to blink.
- 2 Press **A** button to activate or deactivate the automatic reset mode.



- 3 To end the selection, press **B** button. The display will return to the ordinary conditions.