



## Removing & Installing Body Components ► Right Front Side Cowl

The right front side cowl must be removed to service the coolant reserve tank.

### Removal

1. Remove the clips A and front spoiler.
2. Remove the clip A, clips B, bolt A and bolts B from the right front side cowl.
3. Release the tabs from the slots.  
► Carefully release the tabs.
4. Remove the prongs from the grommets.
5. Remove the right front side cowl.  
► Be careful not to apply weight to the front side cowl.

### Installation

Install the parts in the reverse order of removal.