



| | |
|------------------------------------|-------------|
| E | |
| Electrical Trouble | 92 |
| Engine | |
| Number | 110 |
| Oil | 47, 61 |
| Oil Filter | 63 |
| Overheats | 81 |
| Starting | 34 |
| Stop Switch | 32, 34, 100 |
| Stopping | 100 |
| Environment | 109 |
| F | |
| Flooded Engine | 34 |
| Frame Number | 110 |
| Front Brake Lever Adjustment | 75 |
| Fuel | |
| Gauge | 21 |
| Recommended | 36 |
| Remaining | 21 |
| Tank Capacity | 36 |
| Fuels Containing Alcohol | 103 |
| Fuses | 46, 96 |

| | |
|-------------------------------|--------|
| G | |
| Gasohol | 103 |
| H | |
| Hazard Switch | 32 |
| Headlight Aim | 77 |
| Headlight Dimmer Switch | 32 |
| Helmet Holder | 37 |
| High Beam Indicator | 31 |
| High Coolant Temperature | |
| Indicator | 22, 81 |
| HISS Indicator | 30, 80 |
| Horn Button | 32 |