

Changing Engine Oil & Filter

Changing the oil and filter requires special tools. We recommend that you have your motorcycle serviced by your dealer.

Use a new Honda Genuine oil filter or equivalent specified for your model.

NOTICE

Using the wrong oil filter can result in serious damage to the engine.

1. Place your motorcycle on a firm, level surface and lower the side stand.
2. Remove the right under cover. **P. 71**
3. If the engine is cold, idle the engine for 3 to 5 minutes.
4. Turn the ignition switch off, and wait for 2 to 3 minutes.
5. Place a drain pan under the drain bolt.

Engine Oil ▶ Changing Engine Oil & Filter

6. Remove the oil fill cap, drain bolt, and sealing washer to drain the oil.

