


Tyre Puncture ▶ Removing Wheels


Rear Wheel

Removal

1. Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.
2. Loosen the muffler band bolts.
3. Remove the muffler stay bolt, nut and washer.

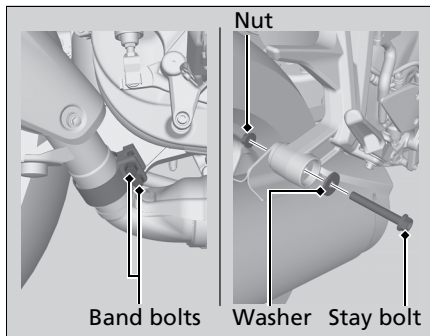

4. Move the muffler outward.
5. Remove the rear wheel nuts, and remove the rear wheel.

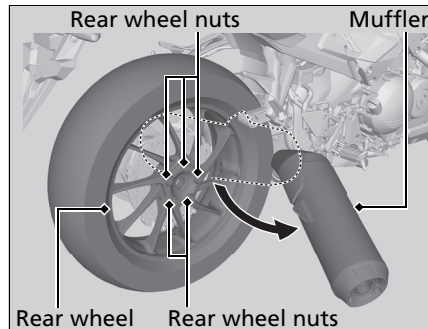

Troubleshooting