

Tyre Puncture ► Removing Wheels

Installation

1. To install the rear wheel, reverse the removal procedure.
2. Tighten the rear wheel nuts equally.

Torque: 108 N·m (11.0 kgf·m, 80 lbf·ft).

3. Hold the muffler mounting bolt and tighten the mounting nut.

Torque: 27 N·m (2.8 kgf·m, 20 lbf·ft).

4. Tighten the muffler band bolts.

Torque: 21 N·m (2.1 kgf·m, 15 lbf·ft).

5. Check that the wheel rotates freely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

Troubleshooting