

Ref. No.	Description	Function
1	Speedometer	Shows riding speed.
2	Odometer	Shows accumulated mileage.
3	Neutral indicator (green)	Lights when the transmission is in neutral.
4	Turn signal indicator (green)	Flashes when the turn signal operates.
5	High beam indicator (blue)	Lights when the headlight is on high beam.
6	Tripmeter	Shows mileage per trip.
7	Coolant temperature indicator (red)	<p>Lights when the coolant is over the specified temperature.</p> <p>If the indicator goes on while riding, stop the engine and check the reserve tank coolant level. Read pages 20–22 and do not ride the motorcycle until the problem has been corrected.</p> <p>CAUTION:</p> <p>* Exceeding maximum running temperature may cause serious engine damage.</p>