


## DRIVE CHAIN SLIDER


(Refer to the maintenance precautions on page 58).

Remove the left pivot plate cover (1) by removing the three bolts (2).

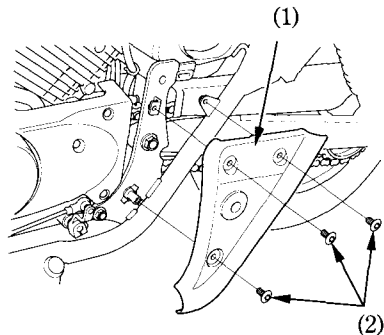

- (1) Left pivot plate cover
- (2) Bolts

Check the chain slider (3) for wear. The chain slider must be replaced if it is worn to the wear limit line (4). For replacement, see your Honda dealer.

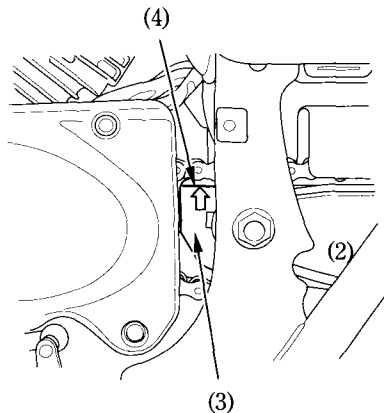

- (3) Chain slider
- (4) Wear limit line