

FUEL AND OIL

Fuel Tank


The fuel tank holds 14.0 liters (3.6 U.S. gal., 3.0 Imp. gal.) including the 2.5 liters (0.6 U.S. gal., 0.5 Imp. gal.) in the reserve supply. To open the fuel tank cap (1), insert the key (2) and turn it clockwise. The cap is hinged and will lift up. Use low-lead gasoline with an Octane number of 91 or higher.

FOR NEW SOUTH WALES ONLY:

Use unleaded fuel with a research octane number of 91 or higher.

WARNING:

- Do not overfill the tank (there should be no fuel in the filler neck). After refueling, make sure the tank cap is closed securely and the cap latch is locked.
- Gasoline is extremely flammable and is even explosive under certain conditions. Whenever the tank cap is open, be sure the engine is stopped and that there are no lighted cigarettes or flames nearby.

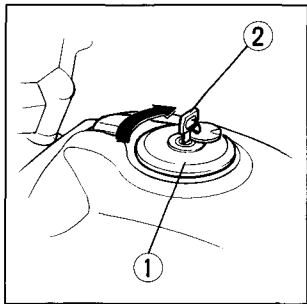

Fuel Valve

The fuel valve (1) is located under the left side of the fuel tank. With the valve set in the "OFF" position, fuel supply is cut off. The valve should be set in this position when the motorcycle is not in use.

Turn to the "ON" (straight down) position for normal riding (gasoline will flow to the carburetors).

Turning the fuel valve to the "RES" position allows fuel to flow from the reserve supply.

