

Fuse Replacement

The fuse box (1) is located between the handlebars. Main fuse (2) is installed beside the battery. When frequent failure of the fuse occurs, it usually indicates a short circuit or an overload in the electrical system. Consult your Honda dealer.

WARNING: Never use a fuse with a different rating from that specified on the fuse box and never use conductive material to replace a fuse.

CAUTION: Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.

- (1) Fuse box
- (2) Main fuse
- (3) Spare main fuse

