


Rear Suspension

The rear suspension can provide the desired ride under various rider/passenger weight and riding conditions through adjustments of the spring preload adjuster (1).


The spring preload adjuster is located behind the left side cover. Remove the left side cover by turning the screw (2) counterclockwise and pulling the cover (3)

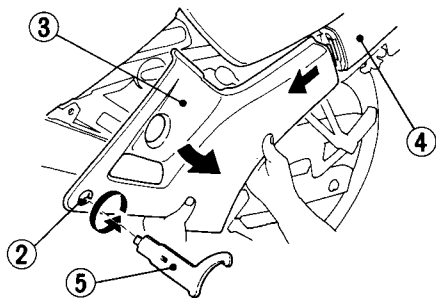

- (2) Screw
- (3) Left side cover
- (4) Rear cowl
- (5) Pin spanner

out carefully while hold the rear cowl (4). Use the pin spanner (5) and breaker bar (6) provided to make adjustments.

Position "1" is for light loads and smooth road conditions. Position "2" to "7" increase spring preload for a stiffer rear suspension, and can be used when the motorcycle is heavily loaded.

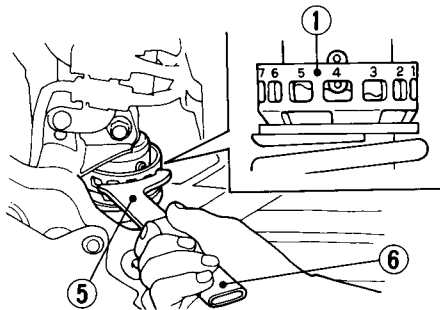

- (1) Spring preload adjuster
- (6) Breaker bar