

## WHEEL REMOVAL

(Refer to Maintenance Precautions on page 54).

### Front Wheel Removal

1. Raise the front wheel off the ground by placing a padded block centered under the engine.
2. Disconnect the speedometer cable from the speedometer gearbox by removing the cable set screw (1).
3. Remove the fixing bolts (3) and remove the right brake caliper (2).

#### CAUTION:

\* Support the caliper assembly so that


it doesn't hang on the brake hose. Do not twist the brake hose.

4. Remove the axle holder (4) by removing the axle holder nuts (5).


#### NOTE:

\* Do not depress the brake lever when the wheel is off the motorcycle. The caliper pistons will be forced out of the cylinders with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer for this service.

5. Remove the front wheel.

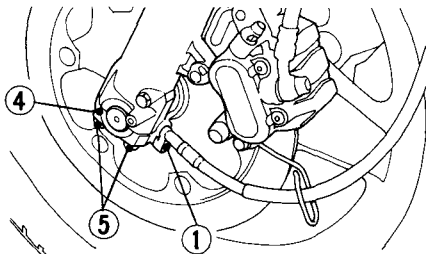

(1) Cable set screw

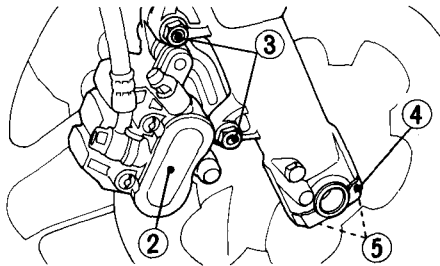

(2) Brake caliper  
(3) Fixing bolts

(4) Axle holder  
(5) Axle holder nuts