



To replace any fuses in the fuse box (4), remove the fuse box cover (5) by removing the screws (6) that secure it. Spare fuses (7) are located in the fuse box. Pull the old fuse out of the clips with the fuse remover (8). Push a new fuse into the clips and install the fuse box cover. Tighten the screws.

**⚠ WARNING**

\* **Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.**

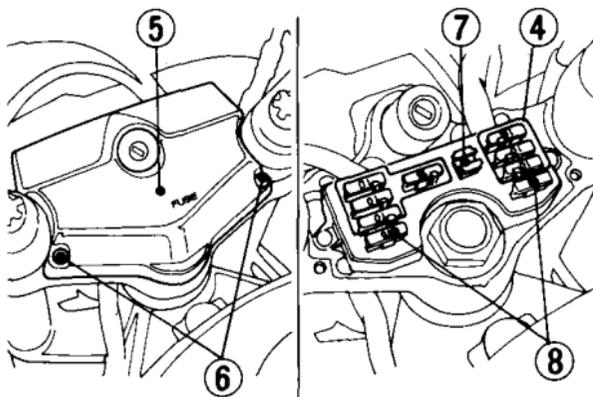

- |                    |                  |
|--------------------|------------------|
| (4) Fuse box       | (7) Spare fuses  |
| (5) Fuse box cover | (8) Fuse remover |
| (6) Screws         |                  |

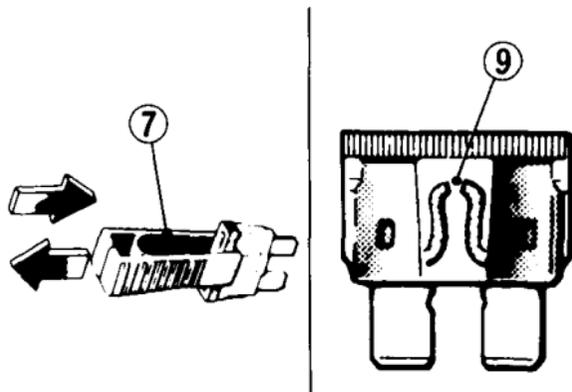

- |                  |                |
|------------------|----------------|
| (8) Fuse remover | (9) Blown fuse |
|------------------|----------------|