

## FEATURES


### (Not required for operation)

#### STEERING LOCK

The steering lock (1) is on the steering stem.

#### To Lock:

〈E,F,ED,U,SW,SP,AR, II IT, II PO type〉  
Turn the handlebar all the way to the left or right, and insert the key into the lock, turn the key clockwise and remove it.

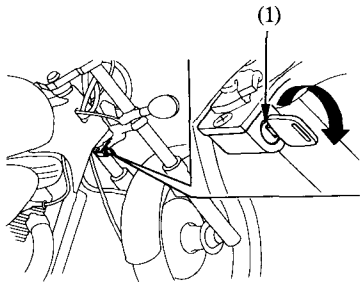


(1) Steering lock

〈E,F,ED,U,SW,SP,AR, II IT, II PO type〉

#### 〈G, II G,FI type〉

The steering lock (1) is on the steering column.

To lock the steering, turn the handlebar all the way to the left, insert the steering key into the lock, turn the key counterclockwise as far as possible. Then, press the lock all the way in, turn the key back to the original position, and remove the key. To unlock the steering, perform the locking sequence in the reverse order.

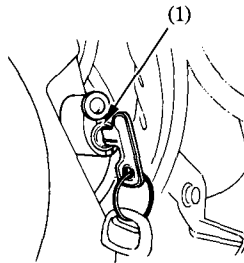

(1) Steering lock 〈G, II G,FI type〉