


3. Loosen the axle pinch bolts (3) and remove the front axle (4). Pull out the front axle. Remove the front wheel.

**NOTE:**

- \* Do not depress the brake lever when the wheel is off the motorcycle. The caliper pistons will be forced out of the cylinders with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer for this service.

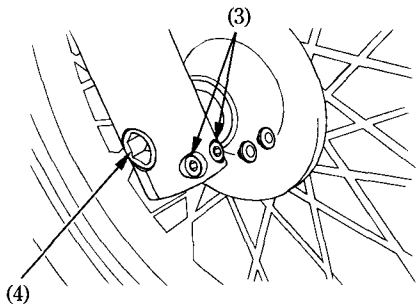

- (3) Axle pinch bolts  
(4) Front axle