

## INSTRUMENTS AND INDICATORS

The indicators are located within and below the speedometer.

Their functions are described in the table on the following page.

- (1) Tripmeter reset knob
- (2) Speedometer
- (3) Odometer
- (4) Tripmeter
- (5) Coolant temperature indicator
- (6) Turn signal indicator
- (7) Neutral indicator
- (8) High beam indicator
- (9) Low oil pressure indicator
- (10) Side stand indicator

