


## Oil Recommendation

type	hypoid gear oil
viscosity (weight)	SAE 80

## Checking & Adding Oil

Refer to *Safety Precautions* on page 56 .

LEFT REAR

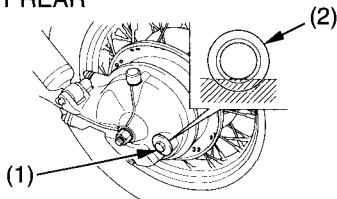

(1) oil filler cap

(2) oil filler hole

1. Place the motorcycle on its side stand on a firm, level surface.
2. Remove the oil filler cap (1).
3. Check the oil level. It should be flush with the lower edge of the oil filler hole (2).
4. If the level is low, check for leaks. Add the recommended oil through the oil filler hole until it reaches the lower edge of the opening.
5. Install the oil filler cap and tighten to the specified torque:  
9 lbf·ft (12 N·m , 1.2 kgf·m)