

If You Have a Flat Tire

4. Unscrew and remove the front axle shaft (2). Remove the wheel.

Avoid depressing the brake lever when the wheel is off the motorcycle. This will force the caliper pistons out of the cylinders. The result will be loss of brake fluid. If this occurs, the brake system will require service. See your Honda dealer for this service.

Installation

1. Install the side collars and position the wheel between the fork legs. Insert the front axle shaft from the right side, through the right fork leg and wheel hub.
 - To avoid damaging the brake pads while installing the wheel, carefully fit the brake disc between the pads.
2. Tighten the front axle shaft to the specified torque:
54 lbf·ft (74 N·m , 7.5 kgf·m)

(cont'd)