

(Ref.No.) Description	Function
(6) High coolant temperature indicator (red)	<p>Lights when the coolant is over the specified temperature. If the indicator goes on while riding, stop the engine and check the reserve tank coolant level. Read pages 24 – 25 and do not ride the motorcycle until the problem has been corrected.</p> <p>NOTICE</p> <p>Exceeding maximum running temperature may cause serious engine damage.</p>
(7) Odometer/Tripmeter display	Shows odometer and tripmeter.
Odometer	Shows the total miles (For E type) or kilometers (Except E type) ridden (page 16).
Tripmeter 1 and 2	Shows the number of miles (For E type) or kilometers (Except E type) ridden since you last reset the meter (page 16).