

- Tighten and torque the nuts and bolts to the specified torque:

Rear axle nut:

88 N·m (9.0 kgf·m , 65 lbf·ft)

Axle holding bolt:

27 N·m (2.8 kgf·m , 20 lbf·ft)

Brake stopper arm nut:

22 N·m (2.2 kgf·m , 16 lbf·ft)

Exhaust pipe joint nut:

25 N·m (2.5 kgf·m , 18 lbf·ft)

Muffler bracket bolt:

27 N·m (2.8 kgf·m , 20 lbf·ft)

Muffler bracket nut:

44 N·m (4.5 kgf·m , 32 lbf·ft)

Footpeg bracket bolt A, B and nut:

39 N·m (4.0 kgf·m , 29 lbf·ft)

- Adjust the rear brake (page 20 ).
- Apply the brake several times and check for free wheel rotation after the brake pedal is released.

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.