


Fuse box:

The fuse box (1) is located behind the right side cover. The specified fuse are:

10A,15A

1. Remove the right side cover (page 34).
2. Open the fuse box cover (2).
3. Pull out the fuse(3). If the fuse is blown, install a new fuse.
The spare fuses (4) are located in the fuse box.
4. Install the fuse box cover and right side cover.

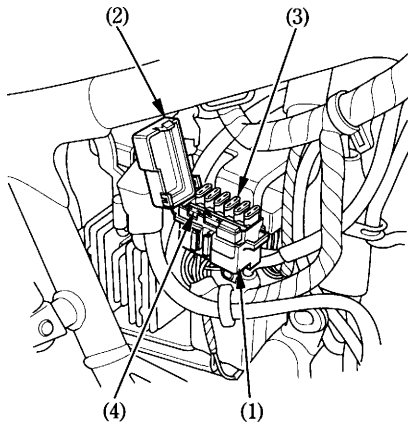

(1) Fuse box
(2) Fuse box cover

(3) Fuse
(4) Spare fuses