

(Ref.No.) Description	Function
(1) Speedometer	Shows riding speed.
(2) Low oil pressure indicator (red)	<p>Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>CAUTION:</p> <p>* Running the engine with insufficient oil pressure may cause serious engine damage.</p>
(3) Tachometer	Shows engine rpm.
(4) Tachometer red zone	<p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p>CAUTION:</p> <p>* Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.</p>
(5) Fuel reserve indicator	Lights when there is only few fuel left in the tank. about : 2.8 l (0.74 US gal , 0.62 Imp gal)
(6) Side stand indicator(amber)	Lights when the side stand is put down. Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 84) is activated.