


Coolant Temperature Meter

The coolant temperature meter (1) shows coolant temperature digitally.

Temperature Display

Below 34°C	“— —” is displayed.
Between 35°C and 132°C	Actual coolant temperature is indicated.
Above 132°C	The display will remain “132°C”.

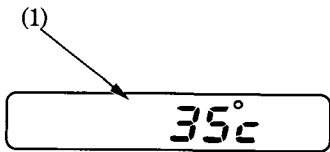


(1) Coolant temperature meter

Overheating Message

When the coolant temperature reaches 122°C, the display begins to flash and coolant temperature indicator (2) goes on. If this occurs, stop the engine and check the reserve tank coolant level. Read pages 32 – 33 and do not ride the motorcycle until the problem has been corrected. If the coolant temperature reaches 122°C while the odometer and tripmeter display is selected, the display will automatically switch to coolant temperature.

NOTICE

Exceeding maximum running temperature may cause serious engine damage.

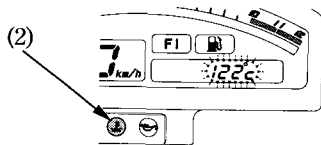

(2) Coolant temperature indicator