



## FUEL TANK MAINTENANCE POSITION

The front of the fuel tank can be tilted up for maintenance.

The fuel tank does not require draining.

### To raise:

1. Remove the front seat (page 51 ).
2. Remove the two bolts (1) with washers.
3. Raise the front of the fuel tank (4) and install the bolts (1) to frame body.
4. Insert a pin spanner (2) from the tool set in the extension bar (3).
5. Raise the front of the fuel tank (4) and place the pin spanner (2) and extension bar (3) between the front of the fuel tank (4) and frame body.

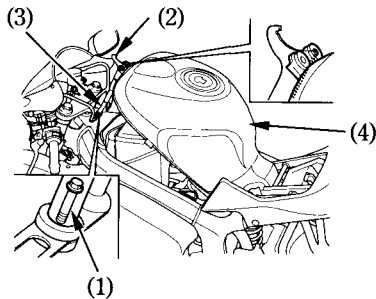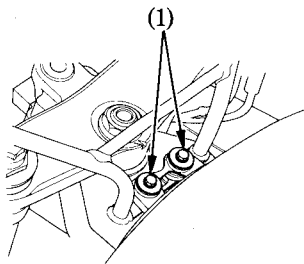

(1) Bolts  
(2) Pinspanner

(3) Extension bar  
(4) Fuel tank