


CRANKCASE BREATHER

Refer to the Safety Precautions on page 73 .

1. Remove the crankcase breather tube plug (1) from the tube and drain deposits into a suitable container.
2. Reinstall the crankcase breather tube plug.

Service more frequently when ridden in rain, at full throttle, or after the motorcycle is washed or overturned.

Service if the deposit level can be seen in the transparent section of the crankcase breather tube.

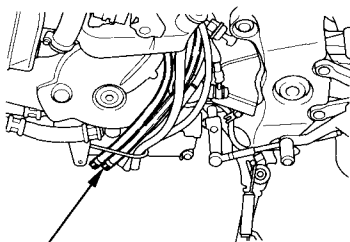

(1)

(1) Crankcase breather tube plug