

(Ref.No.) Description	Function
(6) Tachometer	Shows engine revolutions per minute.
(7) Tachometer red zone	<p>Never allow the tachometer gauge liquid crystal display to enter the red zone, even after the engine has been broken in.</p> <p>NOTICE</p> <p>Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.</p>
(8) Coolant temperature indicator (red)	<p>Lights when the coolant is over the specified temperature. If the indicator goes on while riding, stop the engine and check the reserve tank coolant level. Read pages 32 – 33 and do not ride the motorcycle until the problem has been corrected.</p> <p>NOTICE</p> <p>Exceeding maximum running temperature may cause serious engine damage.</p>
(9) Turn signal indicator (green)	Flashes when the either turn signal operates.