




Gauges, Indicators & Displays

Coolant Temperature Meter

The coolant temperature meter (1) shows the coolant temperature digitally.

USA : Fahrenheit (°F),
Canada : Centigrade (°C).

If the tripmeter is displayed, push the multi-function select and reset button (2) to display the coolant temperature.

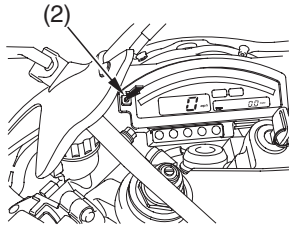

Temperature Display

Below 94°F (34°C)	“--” is displayed
Between 95°F – 270°F (35°C – 132°C)	Actual coolant temperature is displayed.
Above 270°F (132°C)	The display remains “270°F (132°C)”

< For USA >



< For Canada >



- (1) coolant temperature meter
- (2) multi-function select and reset button

