



Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle, clutch, and brakes. It also provides important information on riding with a passenger or cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 206).

Safe Riding Precautions	40
Starting & Stopping the Engine	41
Preparation.....	41
Starting Procedure	42
Flooded Engine.....	44
Bank Angle Sensor Ignition Cut-off System.....	45
How to Stop the Engine	46
Shifting Gears.....	47
Braking	49
Parking	51
Riding with a Passenger or Cargo.....	55

