



## Starting & Stopping the Engine


The low oil pressure indicator should go off a few seconds after the engine starts. If the low oil pressure indicator lights during operation, stop the engine immediately and check the engine oil level.

### Starting Procedure

To restart a warm engine, follow the procedure for *High Air Temperature*.

Normal Air Temperature  
10° – 35°C (50° – 95°F)

LEFT SIDE

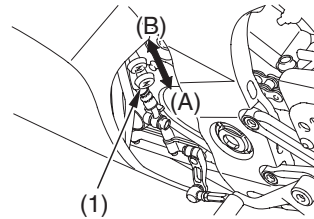

(1) choke knob

(A) fully ON  
(B) fully OFF

