



If You Have a Flat Tire

Emergency Front Wheel Removal/Installation

Refer to *Safety Precautions* on page 62 .


We recommend wheel removal be done only by your Honda dealer or another qualified mechanic. Do not attempt to remove the wheel on your own. Wheel removal requires mechanical skill and professional tools.

Removal

1. Park your motorcycle on a firm, level surface.
2. Raise the front wheel off the ground by placing a support block under the engine.

3. Remove the fixing bolts (1) and remove the reflectors and right and left caliper assemblies (2) from the fork legs.

RIGHT SIDE

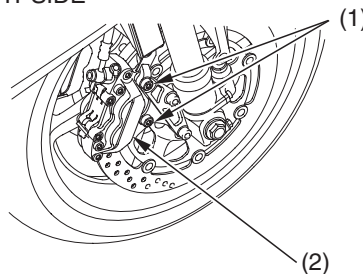

- (1) fixing bolts
(2) brake caliper assembly

(cont'd)

