

# Maintenance Safety Tips

---

## Maintenance Safety Tips

Stop the engine and remove the key when servicing.

- Park on a flat and stable surface using the side stand.

