

## Clutch

### Free play in the clutch lever >

Squeeze the clutch lever until resistance is felt.  
Measure the distance traveled at the tip of the  
clutch lever with a ruler.

**Free play: 10 - 20mm**

Adjust the free play if necessary (p.63).

