


Side Cover Removal

Refer to *Safety Precautions* on page 64 .

The left side cover must be removed to access the main fuses, tool kit and owner's manual, or to check the color label.

LEFT SIDE

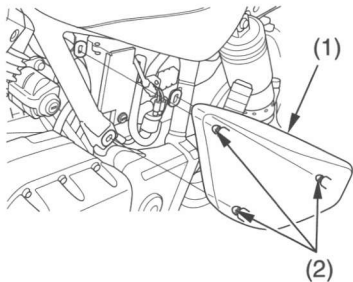

(1) left side cover

(2) prongs

Left Side Cover Removal

1. Carefully pull the left side cover (1) out until the prongs (2) are clear of the frame grommets.
2. Remove the left side cover.

Left Side Cover Installation

1. Position the cover so the prongs are aligned with the frame grommets.
2. Push the cover in place.