


Coolant

Checking & Adding Coolant

Refer to *Safety Precautions* on page 64 .

LEFT SIDE

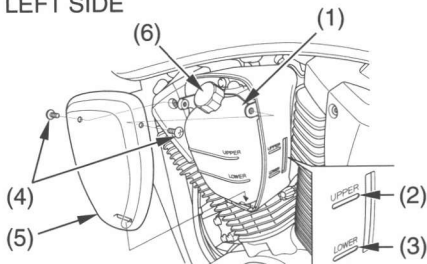

- (1) reserve tank
- (2) UPPER level mark
- (3) LOWER level mark
- (4) screws
- (5) reserve tank cover
- (6) reserve tank cap

1. With the engine at normal operating temperature, check the coolant level in the reserve tank (1). It should be between the UPPER (2) and LOWER (3) level marks.

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your Honda dealer for repair.

2. Remove the screws (4).
3. Remove the reserve tank cover (5).
4. Remove the reserve tank cap (6).
Always add coolant to the reserve tank. Do not attempt to add coolant by removing the radiator cap.
5. Add coolant to the reserve tank as required to bring the coolant level to the UPPER level mark.
6. Install the reserve tank cap.
7. Install the reserve tank cover.