




Inspection

The reserve tank (1) is in the center compartment.

Open the seat (page47) and check the coolant level in the reserve tank while the engine is at the normal operating temperature with the scooter in an upright position. If the coolant level is below the LOWER level mark (2), remove the clip (3) (page66) and coolant reserve tank lid (4). Open the reserve tank cap (5) and add coolant mixture until it reaches the UPPER level mark (6).

Always add coolant to the reserve tank. Do not attempt to add coolant by removing the radiator cap.

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your Honda dealer for repair.

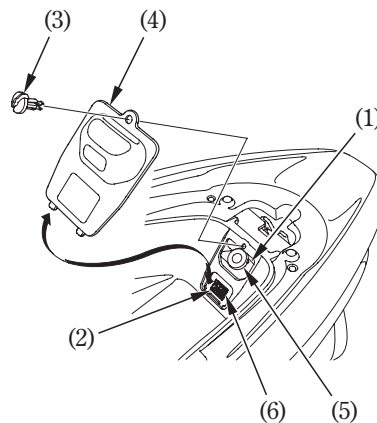

- | | |
|----------------------|----------------------|
| (1) Reserve tank | (4) Reserve tank lid |
| (2) LOWER level mark | (5) Reserve tank cap |
| (3) Clip | (6) UPPER level mark |

