


The start button is next to the throttle grip. When the start button is pressed, the starter motor cranks the engine. See page 68 for the starting procedure.

## Idling Stop Switch (2)

Push the Idling Stop switch to activate or deactivate the Idling Stop system. Refer to the "IDLING STOP SYSTEM" on page 52.

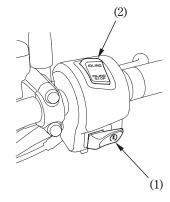

- (1) Start button
- (2) Idling Stop switch



