




Always follow the precautions of Idling Stop system described below.

- Do not leave the scooter while the engine is stopped by the Idling Stop system.  
When you leave the scooter, always take the ignition key (1) with you.

- Do not push down on the seat while the engine is stopped by the Idling Stop system.

For example, push the seat down by hand or body, or put the luggage on the seat.  
The engine will start unexpectedly if the throttle is opened with loading on the seat.

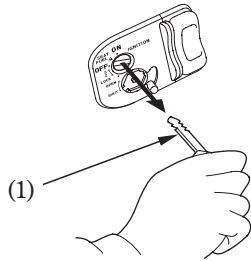

(1) Ignition key

