



When the STAND BY indicator does not flash, perform the followings.

Symptom	Possible cause	What to do
Engine does not start even open the throttle	Riding in wrong position.	Ride the scooter in proper riding position. Idling Stop system is designed not to work when no load on the seat.
	Left the scooter for more than 3 minutes.	The Idling Stop system will be cancelled, if you get off the scooter for about 3 minutes (without sitting properly), while the engine is stopped by the Idling Stop system.
	Excessive luggage in the center compartment.	Luggage interfere with the seat to close completely. Take out some luggage from the center compartment, to close the seat completely.
	Side stand is down.	When you put down the side stand, Idling Stop system will be cancelled. See starting procedure (page 68) for standard engine starting.
	Idling Stop switch is at "IDLING".	When you push the Idling Stop switch to the "IDLING", the Idling Stop system will be cancelled.

