




4. Remove the battery holder (3).
5. Disconnect the negative (-) terminal lead (4) from the battery first, then disconnect the positive (+) terminal lead (5).
6. Remove the battery (6).

Installation:

1. Reinstall in the reverse order of removal. Be sure to connect the positive (+) terminal first, then the negative (-) terminal.
2. Check all bolts and other fasteners are secure.

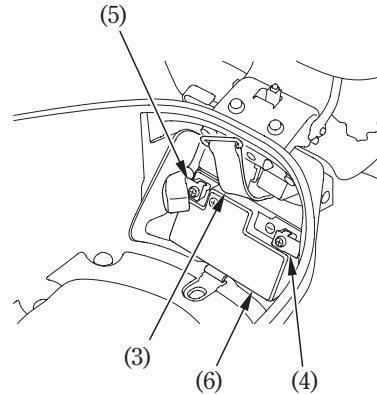

- (3) Battery holder
- (4) Negative (-) terminal lead
- (5) Positive (+) terminal lead
- (6) Battery

