

### Restart the Engine


- Check the flashing Idling Stop indicator and the throttle is opened.
  - ▶ If it is not flashing, you can't restart the engine with the Idling Stop system, even if you open the throttle.
  - ▶ If you lower the side stand, Idling Stop system will be cancelled. At the same time, the flashing Idling Stop indicator changes to stay on.

**Engine Does Not Start Even If the Throttle is Opened:**  **P.86**

### **NOTICE**

Headlights stay on after the engine is stopped by the Idling Stop system. The battery may discharge and you may not be able to restart engine. When the battery is weak, switch the Idling Stop switch to IDLING and do not to use the Idling Stop system. See your dealer to check the battery.

See your dealer for checking the battery as specified in the maintenance schedule.

**Maintenance Schedule:**  **P.46**