










# Maintenance Schedule

## Maintenance

Items	Pre-ride Check ☞ P. 47	Frequency *1							Annual Check	Regular Replace	Refer to page
		x 1,000 km	1			8		12			
		x 1,000 mi	0.6	2.5	4	5	7.5				
Fuel Line			I	I	I	I	I	I		-	
Fuel Level	I									-	
Throttle Operation		I	I	I	I	I	I	I		78	
Air Cleaner *2			Every 16,000 km (10,000 mi) R								-
Crankcase Breather *3			C	C	C	C	C	C	C	62	
Spark Plug										63	
Valve Clearance			I	I	I	I	I	I		-	
Engine Oil	I		R						R	66	
Engine Oil Strainer Screen									C	67	
Engine Idle Speed			I	I	I	I	I	I		-	
Radiator Coolant *4		I								70	
Cooling System										-	
Drive Belt			Every 8,000 km (5,000 mi) I, Every 24,000 km (15,000 mi) R								-

### Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled.

 : Technical. In the interest of safety, have your scooter serviced by your dealer.

### Maintenance Legend

**I** : Inspect (clean, adjust, lubricate, or replace, if necessary)

**R** : Replace

**C** : Clean