


## Headlight Bulb

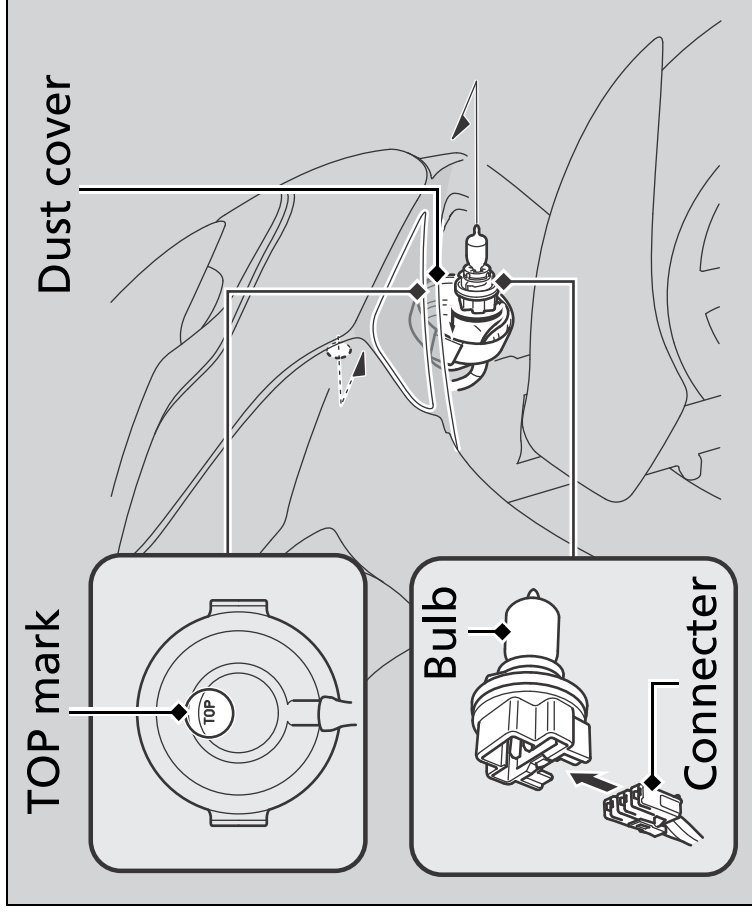

1. Pull the dust cover back.
2. Turn the bulb counterclockwise and pull it out.
3. Remove the bulb from the connector.
4. Install a new bulb and parts in the reverse order of removal.
  - Install the dust cover with its TOP mark facing up.

Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol.