


## Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." ► P. 50

### Fuse Box Fuses

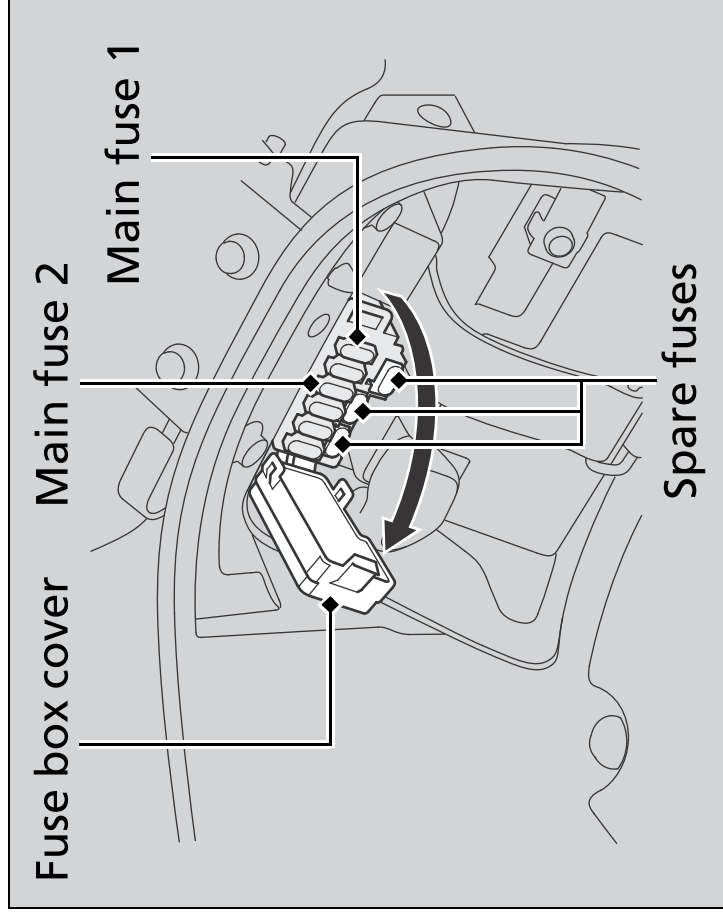

1. Remove the battery cover. ► P. 58
2. Open the fuse box cover.
3. Pull the main fuse 1, main fuse 2 and other fuses out with the fuse puller in the tool kit one by one and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Close the fuse box cover.
5. Install the battery cover.

#### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your scooter inspected by your dealer.