


SEAT

To remove the seat (1), insert the ignition key into the seat lock (2) and turn it clockwise. Pull the seat back and up.

To install the seat, align the locating slot (3) under the front of the seat with the pin (4) on the rear of the fuel tank, align the locating prongs (5) on the bottom of the seat with the hooks (6) on the frame, slide the seat into position and then push down on the rear of the seat.

CAUTION:

* **Be sure the seat is locked securely in position after installation.**

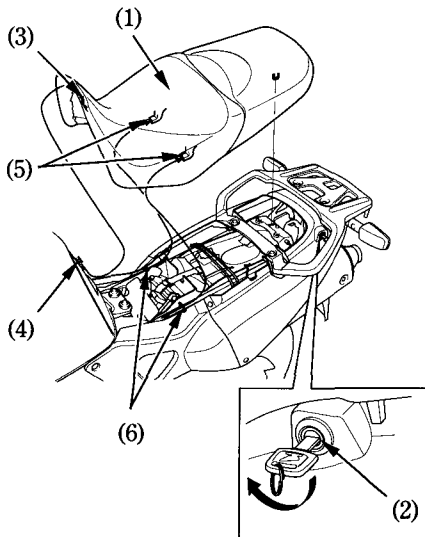

(1) Seat

(2) Seat lock

(3) Slot

(4) Pin

(5) Prongs

(6) Hooks