


Stop/Taillight Bulb

1. Remove the seat (page 39).
2. Turn the socket (1) 90° counterclockwise and remove it.
3. Slightly press the bulb (2) and turn it counterclockwise.
4. Install a new bulb in the reverse order of removal.

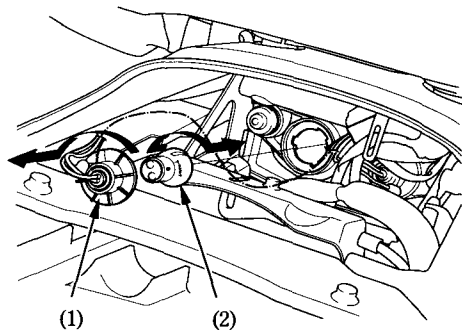

(1) Socket

(2) Bulb