

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER READING [NOTE(1)]				REFER TO PAGE
			x1000km	1	4	8	
		EVERY	x1000mi	0.6	2.5	5	
		MONTHS		6	12	18	
DRIVE CHAIN	NOTE(3)	EVERY 1000km (600mi) I, L				122	
DRIVE CHAIN SLIDER				I	I	I	
BATTERY				I	I	I	142
BRAKE SHOE WEAR				I	I	I	134
BRAKE SYSTEM			I	I	I	I	130
* BRAKE LIGHT SWITCH				I	I	I	146
* HEADLIGHT AIM				I	I	I	
CLUTCH SYSTEM			I	I	I	I	120
SIDE STAND				I	I	I	148
* SUSPENSION				I	I	I	136
* NUTS, BOLTS, FASTNERS	NOTE(3)		I		I		
** WHEELS/TIRES	NOTE(3)		I	I	I	I	
** STEERING HEAD BEARING			I			I	

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED REFER TO THE OFFICIAL HONDA SHOP MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

NOTE: (1) At high odometer readings, repeat at the frequency interval established here.

(2) Service more frequently when riding in dusty areas.

(3) Service more frequently when riding OFF-ROAD.